

reduced time for alignement ets.

Installation:

- Mount the instrument on a place in the feeder where is is easy to read.
- Connect the power supply
- Zero set the instrument by applying a magnet on the Z

Operation:

- Turn the sight toward an aiming point as far away as possible
- Adjust the feeder to match the requested drill angle



Specification:

Measurement range std.

side angle inclination angle

+/- 30 deg +/- 30 deg

Accuracy, all transducers better than, 0,3 deg

Power supply, 10 - 30 VDC, 0,2 A

Dimensions: w=150mm, h=

